



SR516 Installation Guide

Package Contents

Package Contents



SR516
INTERNET MODEM



ETHERNET CABLE



POWER ADAPTER
OUTPUT: 12V



TELEPHONE CORD

Items may not be exactly as shown.




- ① **DSL** Used to connect your Internet Modem to your Internet Line using the Telephone Cord supplied.
- ② **LAN** Used to connect to your computer using the Ethernet Cable supplied.
- ③ **WAN** Currently not supported.
- ④ **DC 12V** Used to connect to a power source using the Power Adapter supplied.

LED Light Indicators



Please follow the step by step instructions on the following pages.

Package Contents

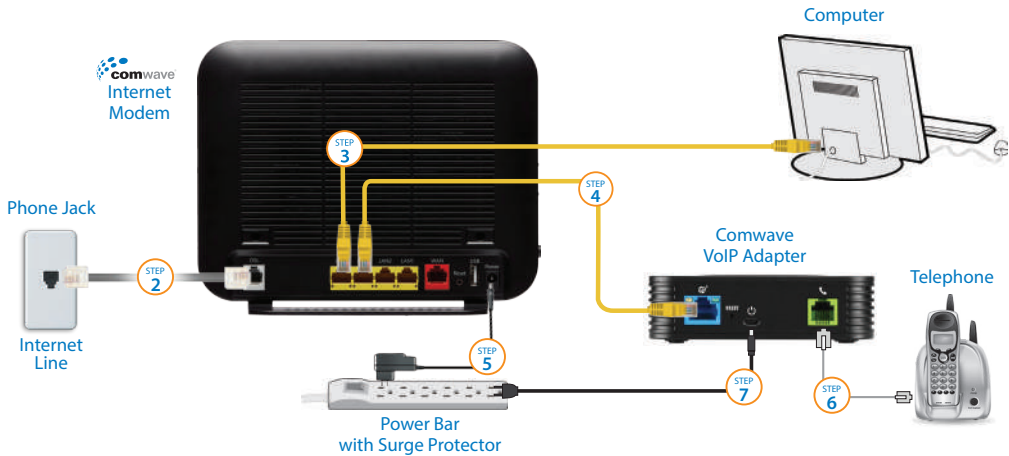

Continue to **STEP 1**

Installation Step-by-Step

- STEP 1** To begin installation, shut down your computer.
- STEP 2** Connect the Comwave Internet Modem using the supplied telephone cord to the phone jack.
- STEP 3** Connect the supplied Ethernet Cable from the LAN port of the Comwave Internet Modem to your computer.
- STEP 4** **(For Home Phone)** Connect the supplied Ethernet cable from the LAN port of your Comwave Internet Modem to the WAN port of the Home Phone Adapter.
- STEP 5** Connect the Comwave Internet Modem to a power outlet.
Note: Please allow up to 5 minutes for your modem to be operational.
- STEP 6** **(For Home Phone)** Connect a telephone to the PHONE 1 port on the Home Phone Adapter. Then connect power to the Home Phone Adapter and wait 5 minutes for a dial-tone. **DO NOT DISCONNECT POWER** as it may damage the Home Phone Adapter.
- STEP 7** Start your computer. You should be able to browse the Internet instantly.

Can't Access the Internet?

- 1** Unplug the power to your Comwave Internet modem, home phone adapter and shut down your computer.
- 2** Wait 30 seconds and then plug your Comwave Internet modem's power cord back into the power outlet.
- 3** Wait until the LED light indicators on your Comwave Internet modem indicate the modem is operational. This may take up to 5 minutes.
- 4** Start your computer and plug in the home phone adaptor into a power outlet.
- 5** Open your browser and start surfing the Internet. Check for a dial tone.

WE'LL GET YOU BACK UP ONLINE!

Wi-Fi Settings



Smart RG SR516

The network name (SSID) and password is on the back of the modem. There are two to choose from. The 5GHz network usually performs the best.

If you would like to change the network name (SSID) and password, please visit comwave.net/support-internet/



Network Name (SSID)


Wi-Fi Password

Advanced Wi-Fi Settings

For advanced users wishing to change their network name and/or password, follow the steps below.



- STEP 1** Open your internet browser and type <http://192.168.17.1> in the address bar.
- STEP 2** Enter your **Username** and **Password** and click **LOGIN** to proceed.
- STEP 3** Click on **Wi-Fi** in the local network on left as shown in figure **STEP 3**.
- STEP 4** Use caution when making any changes.
- STEP 5** Click **Save**.

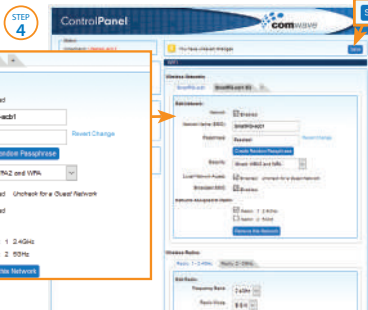

For further assistance, please call
416-663-9600



SR516 Installation Guide